TIMEGUARD[®]

Single Spot 2x 8W LED Light

Model: LED200FLWH – White Model: LED200FLB – Black



1. General Information

These instructions should be read carefully and retained for further reference and maintenance.

2. Safety

- Before installation or maintenance, ensure the mains supply to the luminaire is switched off and the circuit supply fuses are removed or the circuit breaker turned off.
- It is recommended that a qualified electrician is consulted or used for the installation of this luminaire and install in accordance with the current IEE wiring and Building Regulations.
- Check that the total load on the circuit including when this luminaire is fitted does not exceed the rating of the circuit cable, fuse or circuit breaker.

3. Technical Specifications

- 220V 240V AC, 50/60Hz
- This luminaire is of class II construction and must not be earthed
- 2x 8W LED Non replaceable lamp

• Energy efficiency: Class A

Energy Usage: 16KwH/1000H

• Lumen Output: 860lm

Colour Temperature: 5000K - 5600K
 Operating Temperature: -20°C to +40°C

- IP44 Rated suitable for restricted external applications
- CE Approved

- Remove the wall plate from the luminaire by releasing one of the lugs (left or right side) firmly grip the wall plate with your hand, from top and bottom and carefully lift away from the fitting (see Diagram A).
- Select a suitable cable entry point either provided or by drilling into the base ensuring not damage or infringe on any of the internal components.
- Mark the position of the mounting holes on the wall.
- Drill the holes for the wall plugs ensuring not to infringe with any gas/water pipes or electrical cables that may be hidden below the surface (see Diagram B).
- Secure the supply cable into the wall plate through the hole(s) provided ensuring that a cable gland, grommet or sealing compound is used to maintain the IP rating of the luminaire, and fix the wall plate to the wall using the correct screws for the wall plugs installed (see Diagram C).
- Terminate the cable into the terminal block (please refer to section 5 Connection Diagram) ensuring correct polarity is observed and that all bare conductors are sleeved.
- Re-connect the luminaire to the wall plate ensuring the 2 lugs firmly latch on the left and right hand side, indicated by a 'click' (see Diagram D).

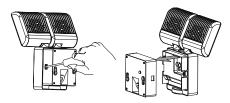


Diagram A

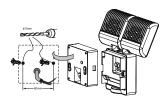


Diagram B


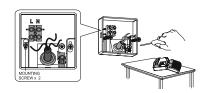


Diagram C



Diagram D

5. Connection Diagram

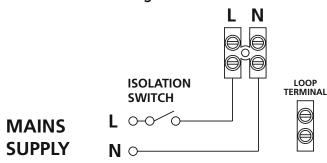

Connect the 2 core mains supply cable to the block on the unit as follows:-

LIVE (Brown or Red) L
NEUTRAL (Blue or Black) N


A 'Loop Terminal' is provided should a 3 core cable be used.

6. Operation

• Turn the power on to the isolating switch and test for correct operation.

7. Lamp Adjustment

• The lamps can be tilted down 85° and pan outwardly 40° (see diagram below).

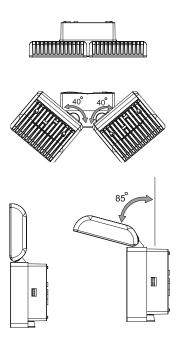

3 Year Guarantee

In the unlikely event of this product becoming faulty due to defective material or manufacture within 3 years of the date of purchase, please return it to your supplier in the first year with proof of purchase and it will be replaced free of charge. For years 2 and 3 or any difficulty in the first year, telephone the helpline on 020 8450 0515.

Note: A proof of purchase is required in all cases. For all eligible replacements (where agreed by Timeguard) the customer is responsible for all shipping/postage charges outside of the UK. All shipping costs are to be paid in advance before a replacement is sent.



If you experience problems, do not immediately return the unit to the store. Telephone the Timeguard Customer Helpline;

HELPLINE **020 8450 0515**

or email helpline@timeguard.com

Qualified Customer Support Co-ordinators will be on-line to assist in resolving your query.



A **theben** Group Company

For a product brochure please contact:

Timeguard Limited.

Victory Park, 400 Edgware Road, London NW2 6ND Sales Office: 020 8452 1112 or email csc@timequard.com

www.timeguard.com

four – August 20